

# IDNet and MAPNET II Addressable Devices

# Device communications compatibility chart

# Table 1: Devices compatible with 4007ES, 4008, 4010, 4010ES, 4100ES and 4100U IDNet communications, and MAPNET II communications

Model	Description	Model	Description
4090-9101	Class B IDC ZAM	4098-9789, 4098-9775	Sensor Base with LED or relay output
4090-9106	Class A IDC ZAM	4098-9791	Four-wire Sensor Base with supervised relay
4098-9750	In-Duct Sensor Housing without relay	4098-9792, 4098-9776	Standard Sensor Base
4098-9751	In-Duct Sensor Housing with relay	4098-9794	Sounder Base
4098-9755	Duct Sensor Housing without relay	4099-9001, 4099-9004	Addressable Station, Standard
4098-9756	Duct Sensor Housing with relay	4099-9002, 4099-9005	Addressable Station, Breakglass
4098-9780	Two-wire Sensor Base with supervised relay	4099-9003, 4099-9006	Addressable Station, Push
4098-XAD-100,	Air aspiration sensor housings.	4099-9020, 4099-9021	NO-GRIP Single Action Addressable Station
4098-XAD-110,	4098-XAD-100, 4098-XAD-110 are single inlet,		
4098-XAD-200,	4098-XAD-200, 4098-XAD-210 are dual inlet		
4098-XAD-210			

## Table 2: Devices with special considerations

Model	Description	Compatibility
4090-9001	Supervised IAMs, 4090-9051 is encapsulated	4007ES, 4008, 4010, 4010ES, 4100ES, and 4100U IDNet with T-sense.
4090-9051	and without LED	MAPNET II with Class B monitoring of N.O. contacts.
4009-9401	TrueAlert Addressable Controller	4010ES, 4100ES, 4100U, and 4100 use RUI, 4010 uses IDNet.
4098-9795	Two Address Sounder Base for sensor	4007ES, 4008, 4010, 4010ES, 4100ES, and 4100U IDNet, and MAPNET II. Two
4098-9796	Two Address Standard Base 4098-9754	consecutive addresses. Does not include TrueSense operation. See this table for
4098-9754	Photo/Heat Multi-Sensor for 4098-9795 and 4098-9796 bases	single address applications of 4098-9754.
4098-9754	Photo/Heat Multi-Sensor, one address for	4007ES, 4010ES, 4100ES, and 4100U IDNet. Uses only one address.
	photo, heat, and TrueSense operation	Use with the following sensor bases: 4098-9770, 4098-9771, 4098-9780, 4098-9789, 4098-9791, 4098-9792, 4098-9793, 4098-9775, 4098-9776, 4098-9777, 4098-9794 4098-9797, 4098-9798
		4098-9766, 4098-9767, IDNet2 only
4098-9764	Photo/Heat Multi-Sensor	4007ES, 4010ES, 4100ES, and 4100U IDNet. Uses only one address.
		Use with the following sensor bases: 4098-9780, 4098-9789, 4098-9791, 4098-9792, 4098-9793, 4098-9775, 4098-9776, 4098-9794
4098-9734	High Temperature Heat Sensor	4007ES, 4010ES, and 4100ES
4098-9019,	Addressable Beam Detector	4007ES, 4010ES, and 4100ES
4098-9020		
4099-9012,	Addressable Releasing Station, Push	Use with IDNet or MAPNET II Releasing panels only.
4099-9015		
4090-9116	IDNet Communications Isolator	4007ES, 4008, 4010ES, 4100ES, and 4100U IDNet
4090-9122	IDNet Isolator2	4007ES, 4010ES, 4100ES. IDNet2 only
4090-9007	IDNet Signal IAM	4007ES, 4008, 4010ES, 4100ES, and 4100U IDNet requires one address but
		consumes two unit loads.
4190-9050	4-20 mA AMZ, revision 2.01 firmware	4007ES, 4010ES, 4100ES, and 4100U IDNet, or 4100U and 4100ES MAPNET II
4190-9051		Operation. MAPNET II requires one unit load, IDNet requires two unit loads.
4090-9008	Dual Contact Relay IAM	4007ES, 4010ES, 4100ES, or 4100U IDNet, or MAPNET II Operation
4090-9010	8 A Relay IAM	4007ES, 4008, 4010, 4010ES, 4100ES, or 4100U IDNet Operation
VLC-600	TrueAlarm LaserCOMPACT	4007ES, 4010ES, 4100ES, and 4100U IDNet, or MAPNET II Operation

# Table 3: Devices compatible with 4007ES, 4010, 4010ES, 4100ES, and 4100U IDNet communications only, except as noted

Model	Description	on	Model	Description
4009-9201	4009 IDNe	t NAC Extender (4009 A)	4090-9002	Relay IAM, also for use with 4008
4009-9301			4098-9793, 4098-9777	Isolator Base, also for use with 4008
			4098-9766, 4098-9767	Isolator2 Base, IDNet2 only
4090-9105	Class B	IDNet Fiber Optic Transmitter	4090-9005	Suppression Release Peripheral (SRP) without
4090-9107	Class A			enclosure. Uses 2975-9227.
4009-9809	IDNet Rep	eater	4090-9006	SRP with enclosure
4907-9001	LED Messa	ige Board		'



Table 4: Devices compatible with 4007ES	4010ES	4100ES	and 4100U IDNet communications only	except as noted

Model	Description	Model	Description
4090-9117	Addressable Power Isolator	4090-9120	Six-point Module, four T-Sense inputs, two relays
4090-9118	Relay IAM with T-Sense Input	4090-9121	Security Monitor IAM, two unit loads. Not with 4007ES
4090-9119	Relay IAM with unsupervised input	4100-1274	Microphone Mux. Module (internal IAM), 4100ES/4100U only
4098-9770,	CO Sensor Standard Base	4098-9771,	CO Sensor Sounder Base
4098-9797		4098-9798	
4098-9772, 4098-9773	CO Sensor Base with 520Hz Sounder		·

- 1. The operation of some models is software revision dependent, see Software compatibility reference for software revision compatibility details for these products.
- 2. The 4090-9116 IDNet Isolators and 4098-9777 Isolator Bases are not compatible with the 4100-3103 Quad Panel Mount Isolator. Operation is compatible with other panel modules that provide IDNet, IDNet 1+, IDNet 2, or IDNet 2+2 SLCs.
- 3. For the 4190-9050 and 4190-9051 4-20 ma AMZ and 4090-9007 IDNet Signal IAM, one address is assigned for IDNet communications but the available SLC address count is reduced by two due to supervisory current requirements.
- 4. Refer to individual product data sheets for listings information.

Table 5: Devices compatible with MAPNET II communications only, refer to Table 13 for other legacy products

Model	Description	Model	Description
2190-9153,	Monitor ZAM, Style D, IDC	2190-9161,	Signal ZAM, Style Y NAC
2190-9154		2190-9162	
2190-9155,	Monitor ZAM, Style B, IDC	2190-9163,	Control Relay ZAM, DPDT Contacts
2190-9156		2190-9164	
2190-9157,	Four-wire Detector ZAM, IDC	2190-9169,	Line powered isolators, non-addressable
2190-9158		2190-9170	
2190-9159,	Signal ZAM, Style Z NAC	2190-9173	Two-point I/O Module
2190-9160			

Table 6: Devices compatible with 4007ES, 4010, and 4010ES IDNet communications, 4100ES with IDNet 2 and IDNet 2+2 Modules, and 4100ES and 4100U with 4100-3106 IDNet Expansion Module

Model	Description
4098-9757	QuickConnect2 Sensor, uses 4098-9788 multi-purpose base
4098-9710	QuickConnect Sensor

Page 2 S4090-0011 Rev. 26 06/2023



# Device communications compatibility with devices in numerical order

The tables in this section include legacy devices not listed in Device communications compatibility chart. For currently available products see Device communications compatibility chart and product data sheets for additional information.

Table 7: Communications compatibility, including legacy devices

Model	Description	4007ES, 4010ES, 4100ES, 4100U IDNet, see note	4010 IDNet	4008 IDNet	MAPNET II
2099-9135	Addressable Station, double action push, no Simplex logo	_	_	_	Yes
2099-9761	Addressable Station, double action push	_	_	_	Yes
2099-9795	Addressable Station, single action	_	_	_	Yes
2099-9796	Addressable Station, double action breakglass	_	_	_	Yes
2099-9797	Addressable Station, single action, LOCAL	_	_	_	Yes
2190-9153	Monitor ZAM, Class A, IDC, surface mount	_	_	_	Yes
2190-9154	Monitor ZAM, Class A, IDC, flush mount	_	_	_	Yes
2190-9155	Monitor ZAM, Class B, IDC, surface mount	_	_	_	Yes
2190-9156	Monitor ZAM, Class B, IDC, flush mount	_	_	_	Yes
2190-9157	Four-wire Detector ZAM, Class B IDC, surface mount	_	_	_	Yes
2190-9158	Four-wire Detector ZAM, Class B IDC, flush mount	_	_	_	Yes
2190-9159	Signal ZAM, Class A NAC, surface mount	_	_	_	Yes
2190-9160	Signal ZAM, Class A NAC, flush mount	_	_	_	Yes
2190-9161	Signal ZAM, Class B NAC, surface mount	_	_	_	Yes
2190-9162	Signal ZAM, Class B NAC, flush mount	_	_	_	Yes
2190-9163	Control Relay ZAM, DPDT Contacts, surface mount	_	_	_	Yes
2190-9164	Control Relay ZAM, DPDT Contacts, flush mount	_	_	_	Yes
2190-9169	Line Powered Isolator, non-addressable, surface mount	_	_	_	Yes
2190-9170	Line Powered Isolator, non-addressable, flush mount	_	_	_	Yes
2190-9172	Individual Addressable Module (IAM), includes 2190-9172A larger package	_	_	_	Yes
2190-9173	Two-point I/O Module	_	_	_	Yes
4009-9201	4009 IDNet NAC Extender (4009A), 120 VAC input	Yes	Yes	_	_
4009-9301	4009 IDNet NAC Extender (4009A), 240 VAC input	See Software compatibility reference for details	Yes	_	_
4009-9401	TrueAlert Addressable Controller (4009T)	use RUI, not with 4007ES	Yes	_	_
4009-9809	IDNet Repeater. Mounts in 4009A or 4009T only	Yes	Yes	_	_
4090-9001	Supervised IAM with LED	with T-sense	with T- sense	with T-sense	no T-sense
4090-9002	Relay IAM	Yes	Yes	Yes	_
4090-9005	Suppression Release Peripheral (SRP) no enclosure	Yes	with Rev.	_	_
4090-9006	SRP with enclosure	See Software compatibility reference for details	3.01	_	_
4090-9007	IDNet Signal IAM, one address	Yes	_	2 unit loads	_
		Two unit loads see Software compatibility reference for details			
4090-9008	Dual Contact Relay IAM	Yes See Software compatibility reference for details	_	_	Yes
4090-9010	8 A Relay IAM	Yes	Yes	Yes	_
4090-9051	Supervised IAMs, encapsulated without LED	with T-sense	with T- sense		no T-sense
4090-9101	Class B IDC ZAM	Yes	Yes	Yes	Yes
4090-9105	Class B IDNet Fiber Optic Transmitter	Yes	Yes	_	_
4090-9106	Class A IDC ZAM	Yes	Yes	Yes	Yes
4090-9107	Class A IDNet Fiber Optic Transmitter	Yes	Yes	_	_
4090-9116	IDNet Communications Isolator, see note.	Yes	_	Yes	
4090-9117	Addressable Power Isolator	Yes	_	_	_
4090-9118	Relay IAM with T-Sense Input	Yes	_	_	_
4090-9119	Relay IAM with unsupervised input	See Software compatibility	_	_	_
4090-9120	Six-point Module, four T-Sense inputs, two relays	reference for details	_	_	_
4090-9121	Security Monitor IAM, two unit loads	Yes Not with 4007ES	_	_	_
4090-9122	IDNet Isolator2, see note for further details	IDNet 2 only. Not 4100U.		_	_
1000 0122	15 free 15 olator 27 See frote for further details	1511Ct 2 011ly, 110t 41000.			

Page 3 S4090-0011 Rev. 26 06/2023



Table 7: Communications compatibility, including legacy devices

Model	Description	4007ES, 4010ES, 4100ES, 4100U IDNet, see note	4010 IDNet	4008 IDNet	MAPNET II
4098-9702	Duct Sensor for 4098-9701 Sensor Head four-wire	_	_	_	Yes
4098-9703	Duct Sensor for 4098-9701 Sensor Head two-wire (2120 CDT)	_	_	_	Yes
4098-9704	In-Duct Sensor for 4098-9701 Sensor Head four-wire	_	_	_	Yes
4098-9705	In-Duct Sensor for 4098-9701 Head two-wire (2120 CDT)	_	_	_	Yes
4098-9706	Duct Sensor for 4098-9701 Head four-wire with 4 in. base	_	_	_	Yes
4098-9707	Duct Sensor for 4098-9701 Head two-wire with 4 in. base (2120 CDT)	_	_	_	Yes
4098-9708	In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base	_	_	_	Yes
4098-9709	In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base (2120 CDT)	_	_	_	Yes

Note: IDNet Isolators and Isolator Bases are not compatible with the 4100-3103 Quad Panel Mount Isolator.

# Table 8: Communications compatibility, including legacy MAPNET II

Apple	Model	Description	4007ES, 4010ES, 4100ES, 4100U IDNet, see note	4010 IDNet	4008 IDNet	MAPNET II
See Software compatibility reference for details   Yes   Yes   Yes   Yes   4098-9750   In-Duct Sensor Housing with relay   Yes   Y	4098-9734	High Temperature Heat Sensor	Yes	_	_	_
Product Sensor Housing without relay   Yes   Yes   Yes   Yes   Yes   Yes   4098-9750   In-Duct Sensor Housing with relay   Yes   Yes   Yes   Yes   4098-9751   Legacy Duct Housing for 4098-9714 with relay   Yes   Yes   Yes   Yes   Yes   4098-9752   Legacy Duct Housing for 4098-9714 with relay   Yes   Yes   Yes   Yes   Yes   4098-9750   QuickConnect sensor   Yes			· ·			
Ves						
### Application		In-Duct Sensor Housing without relay	Yes	Yes	Yes	Yes
A098-9753   Legacy Duct Housing for 4098-9714 with relay   Yes   Yes   Yes   Yes   4098-9710   QuickConnectz Sensor   Yes   Yes   Yes   Yes   Yes   A098-9757   QuickConnectz Sensor, uses 4098-9788 base   See Device communications compatibility chartfor compatibility chartfor compatibility chartfor compatibility reference for details   Yes   Yes			Yes	Yes	Yes	Yes
A098-9710			Yes	Yes	Yes	Yes
A098-9757	4098-9753		Yes	Yes	Yes	Yes
A098-9780   Two-wire Sensor Base with supv. relay   Yes   Yes   Yes   Yes   Yes   See Software compatibility reference for details   Yes   Yes			Yes	Yes	_	_
See Software compatibility reference for details   Sensor Base 6 3/8 in.   With sounder			compatibility chartfor compatibility details			
4098-9781   Sensor Base 6 3/8 in.   — — — — — — — — — — — — — — — — — —	4098-9780	Two-wire Sensor Base with supv. relay	See Software compatibility	Yes	Yes	Yes
4098-9782         Sensor Base 6 3/8 in. with sounder         —         —         —         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         —         —         —         Yes           4098-9784         Standard Sensor Base 4 in.         Yes         Yes         Yes         Yes           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes         Yes         Yes           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Yes	1000 0701	Concor Doco 6 2/9 in	reference for details			Voc
4098-9783         Sensor Base 6 3/8 in. with remote relay driver         —         —         —         Yes           4098-9784         Standard Sensor Base 4 in.         Yes         Yes         Yes         Yes           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes         Yes         Yes           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Yes         Y			_			
4098-9784         Standard Sensor Base 4 in.         Yes         Yes <td< td=""><td></td><td></td><td>_</td><td>_</td><td>_</td><td></td></td<>			_	_	_	
4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. Or relay         Yes			Voc	Vos	Voc	
4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Yes						
4098-9787   Sensor Base 4 in. with supv. remote relay and remote ind. or relay   Yes   Yes   Yes   Yes   Yes   4098-9789,   Sensor Base, remote LED or unsupervised relay   Yes						
4098-9789, dogs-9791         Sensor Base, remote LED or unsupervised relay         Yes						
4098-9775         4098-9791         Four-wire Sensor Base, remote LED or relay, and supv. remote relay         Yes						
A098-9791   Four-wire Sensor Base, remote LED or relay, and supv. remote relay   Yes   Y		Sensor base, remote LED or unsupervised relay	res	162	res	res
relay  4098-9792, Standard Sensor Base  Yes  Yes  Yes  Yes  Yes  Yes  Yes		Four wire Conser Door remote LED or relevand over remote	Vee	Vas	\/aa	\/a.a
4098-9776       4098-9793, Isolator Base, see 4100U/4100ES note       Yes       Yes       Yes       —         4098-9777       4098-9766, IDNet Isolator Base, see note for further details       IDNet 2 only. Not 4100U.       —       —       —         4098-9767       4098-9767       Yes		relay				
4098-9793, downward         Isolator Base, see 4100U/4100ES note         Yes         Yes         —           4098-9777 downward         IDNet Isolator Base, see note for further details         IDNet 2 only. Not 4100U.         —         —         —           4098-9767 downward         Sounder Base         Yes	, , ,	Standard Sensor Base	Yes	Yes	Yes	Yes
4098-9777       IDNet Isolator2 Base, see note for further details       IDNet 2 only. Not 4100U.       —       —       —         4098-9767       4098-9767       Yes       <						
4098-9766, 4098-9767       IDNet Isolator Base, see note for further details       IDNet 2 only. Not 4100U.       —       —       —         4098-9767       4098-9767       Yes       Yes <td>1</td> <td>Isolator Base, see 4100U/4100ES note</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> <td>_</td>	1	Isolator Base, see 4100U/4100ES note	Yes	Yes	Yes	_
4098-9767         Yes         Y						
4098-9794         Sounder Base         Yes	4098-9766,	IDNet Isolator2 Base, see note for further details	IDNet 2 only. Not 4100U.	_	_	_
4098-9795         Two Address Sounder Base for 4098-9754         Yes         Yes         Yes         Yes           4098-9796         Two Address Standard Base for 4098-9754         Yes						
4098-9796         Two Address Standard Base for 4098-9754         Yes         Yes         Yes           4098-9770, 4098-9797         CO Sensor Standard Base         Yes         —         —         —           4098-9797         See Software compatibility reference for details         —         —         —           4098-9798         CO Sensor Base with 520Hz Sounder         —         —         —           4098-9773         CO Sensor Base with 520Hz Sounder         —         —         —           4098-9019,         Addressable Beam Detector         Yes         —         —         —			Yes	Yes	Yes	Yes
4098-9770, degree 1       CO Sensor Standard Base       Yes       —       —       —         4098-9797, degree 2       CO Sensor Sounder Base       See Software compatibility reference for details       —       —       —         4098-9772, degree 2       CO Sensor Base with 520Hz Sounder       —       —       —       —         4098-9773 degree 2       Addressable Beam Detector       Yes       —       —       —		Two Address Sounder Base for 4098-9754	Yes	Yes	Yes	Yes
4098-9797         See Software compatibility reference for details         —         —         —         —           4098-9798         4098-9798         —		Two Address Standard Base for 4098-9754	Yes	Yes	Yes	Yes
4098-9771, degree of the de		CO Sensor Standard Base	Yes	_	_	_
4098-9798       4098-9772,         4098-9772,       CO Sensor Base with 520Hz Sounder         4098-9773       —         4098-9019,       Addressable Beam Detector         Yes       —			See Software compatibility			
4098-9773       4098-9019, Addressable Beam Detector       Yes       —       —			reference for details	_	_	_
4098-9019, Addressable Beam Detector Yes — — —		CO Sensor Base with 520Hz Sounder		_	_	_
		Addressable Beam Detector	Yes 4007ES, 4010ES, 4100ES	_	_	_

Page 4 S4090-0011 Rev. 26 06/2023



## Table 8: Communications compatibility, including legacy MAPNET II

Model	Description	4007ES, 4010ES, 4100ES, 4100U IDNet, see note	4010 IDNet	4008 IDNet	MAPNET II
4099-9001, 4099-9004	Addressable Station, Standard	Yes	Yes	Yes	Yes
4099-9002, 4099-9005	Addressable Station, Breakglass	Yes	Yes	Yes	Yes
4099-9003, 4099-9006	Addressable Station, Push	Yes	Yes	Yes	Yes
4099-9012, 4099-9021	Addressable Releasing Station, Push	Yes not 4007ES	Yes	_	Yes
4099-9020, 4099-9015	NO-GRIP Single Action Addressable Station	Yes	Yes	Yes	Yes
4100-1274	Microphone Multiplex Module, internal IAM	Yes 4100ES and 4100U only, see Software compatibility reference for details	_	_	_
4190-9050	4-20 mA AMZ, revision 2.01 firmware, surface mount	Two unit loads	_	_	1 unit load
4190-9051	4-20 mA AMZ, revision 2.01 firmware, flush mount		_	_	
4907-9001	LED Message Board	Yes	Yes	_	_
VLC-600	TrueAlarm LaserCOMPACT; emulates 4-20 mA AMZ	Yes	_	_	Yes

Note: IDNet Isolators and Isolator Bases are not compatible with the 4100-3103 Quad Panel Mount Isolator.

# 4100ES/4010ES/4007ES/4100U multi-point device point allocations

**Note:** Points and sub-points required to be mapped over the Network are designated as **Public** in the programmer. See notes 1 and 2 at the end of Table 15 for I/O point usage and public points usage guidelines.

# Table 9: 4009 IDNet NAC Extender (4009A)

Model	Description	Point type	4007ES, 4010ES, 4100ES,	Public points usage
			4100U I/O point usage	
4009-9201	4009 IDNet NAC Extender, 120 VAC input	4009A4	Four: one for each NAC	Up to five: one for each NAC, one
4009-9301	4009 IDNet NAC Extender, 240 VAC input			for trouble
4009-9807	Additional four circuit NAC, added to 4009-9201 or 4009-9301	4009A8	0	Up to nine: one for each NAC, one for trouble

## Table 10: Addressable I/O devices

Model	Description		4007ES, 4010ES, 4100ES, 4100U I/O point usage	Public points usage
4090-9118	Relay IAM with T-Sense Input	TRIAM	3	Up to three: one for relay, one for input, one for trouble
4090-9119	Relay IAM with feedback (unsupervised input)	FRIAM		Up to three: one for relay, one for input, one for trouble
4090-9120	Six-point Module, four T-Sense inputs, two relays	MLPTIO	each input	Up to seven: one for each relay, one for each input, one for trouble

## Table 11: TrueAlarm Sensor Bases with 4098-9754, Photo/Heat, TrueSense Multi-Sensor

Model	Description		Point type	Panel I/O poi	nt usage	Public points usage
				4007ES,	4100U	
				4010ES,		
				4100ES		
4098-9792,	Standard Sensor Ba	ase, no outputs	COMBO	One	Two: one for	Up to four: one for smoke, one for heat,
4098-9776					1.	one for correlation, one for trouble
4098-9789,	Sensor Base with re	emote LED or			heat	
4098-9775	unsupervised relay,	on with alarm				
4098-9780	Two-wire Sensor	Supports remote	RCOMBO	One	Two: one for	Up to five: one for smoke, one for heat,
	Base	LED or relay, and			smoke, one for	one for correlation, one for trouble, one
4098-9791	Four-wire Sensor	supervised remote			heat	for relay
	Base	relay				

Page 5 S4090-0011 Rev. 26 06/2023





## Table 11: TrueAlarm Sensor Bases with 4098-9754, Photo/Heat, TrueSense Multi-Sensor

Model	Description	Point type	Panel I/O	ooint usage	Public points usage
			4007ES,	4100U	
			4010ES,		
			4100ES		
4098-9793,	Isolator Base	ICOMBO	One	Two: one for	Up to five: one for smoke, one for heat,
4098-9777				smoke, one for heat	one for correlation, one for trouble, one for isolator
4098-9766,		I2COMBO		lieat	One for Isolator2
4098-9767		IZCOMBO			one for isolator2
4098-9794	Sounder Base	SCOMBO	One	Two: one for smoke, one for heat	Up to five: one for smoke, one for heat, one for correlation, one for trouble, one for sounder

#### Table 12: TrueAlarm Sensor Bases with 4098-9764, Photo/Heat, TrueSense Multi-Sensor

Model	Description		Point type	Panel I/O	points usage	Public points usage		
				4007ES,	4100U			
				4010ES,				
				4100ES				
4098-9792	Standard Sensor Base, no out	outs	COMBO	One	Two: one for	Up to four: one for smoke,		
4098-9776					smoke, one	one for heat, one for correlation, one for trouble		
4098-9789	Sensor Base with remote LED	or unsupervised relay, on			for heat			
4098-9775	with alarm							
4098-9791	Four-wire sensor relay base	Supports remote LED	RCOMBO	One	Two: one for	Up to five: one for smoke,		
4098-9780	098-9780 Two-wire sensor relay base or relay, and supervised remote relay				smoke, one for heat	one for heat, one for correlation, one for trouble, one for relay		
4098-9793	Isolator base		ICOMBO	One	Two: one for smoke, one for heat	Up to five: one for smoke, one for heat, one for correlation, one for trouble, one for isolator		
4098-9794	Sounder base		SCOMBO	One	Two: one for smoke, one for heat	Up to five: one for smoke, one for heat, one for correlation, one for trouble, one for sounder		

Page 6 S4090-0011 Rev. 26 06/2023





# Table 13: TrueAlarm CO Sensor Standard Base 4098-9770, 4098-9797 with compatible sensors

Sensor model	Description	Point Type	Panel I/O p	oint usage	Public points usage	
			4007ES, 4010ES, 4100ES	4100U		
4098-9714, 4098-9774	Photoelectric Smoke Sensor	MCOPS	One	Two: one for photo, one for CO	Up to six: one for trouble reporting, one for sounder (MSOUND) one for photo (MPHOTO), one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off (MAOFF)	
4098-9754, 4098-9779	Multi-Sensor, Photoelectric and Heat Sensing	МСОРН	One	Three: one for photo, one for heat, one for CO	Up to six: one for trouble reporting, one for photo (MPHOTO), one for heat (MHEAT), one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off (MAOFF)	
4098-9733, 4098-9778	Heat Sensor	MCOHS	One	Two: one for heat, one for CO	Up to five: one for trouble reporting, one for sounder (MSOUND), one for heat (MHEAT), one for CO gas (MCOGAS), one for CO fire (MACOFIRE),	
4098-9717	Ionization Smoke Sensor	MCOI	One	Two: one for ion, one for CO	Up to four: one for trouble reporting, one for ion (MION), one for CO gas (MCOGAS), one for CO fire (MACOFIRE)	

Page 7 S4090-0011 Rev. 26 06/2023



# 4010ES/4100U/4100ES multi-point device point allocations

See notes 1 and 2 at the end of Table 15 for I/O point usage and public points usage guidelines.

Table 14: TrueAlarm CO Sensor Sounder Base 4098-9771, 4098-9798 with compatible sensors

Sensor	Description Point type Panel I/O point usage			ooint usage	I/O point usage			
model			4007ES, 4010ES, 4100ES	4100U				
4098-9714, 4098-9774	Photoelectric Smoke Sensor	MCOPS	One	Two: one for photo, one for CO	Up to six: one for trouble reporting, one for sounder (MSOUND) one for photo (MPHOTO), one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off (MAOFF)			
4098-9754, 4098-9779	Multi-Sensor, Photoelectric and Heat Sensing	MCOPHS	One	Three: one for photo, one for heat, one for CO	Up to seven: one for trouble reporting, one for sounder (MSOUND), one for photo (MPHOTO), one for heat (MHEAT) one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off (MAOFF)			
4098-9733, 4098-9778	Heat Sensor	MCOHS	One	Two: one for heat, one for CO	Up to five: one for trouble reporting, one for sounder (MSOUND), one for heat (MHEAT), one for CO gas (MCOGAS), one for CO fire (MACOFIRE),			
4098-9717	Ionization Smoke Sensor	MCOIS	One	Two: one for ion, one for CO	Up to five: one for trouble reporting, one for sounder (MSOUND), one for ion (MION), one for CO gas (MCOGAS), one for CO fire (MACOFIRE)			

Page 8 S4090-0011 Rev. 26 06/2023



Table 15: TrueAlarm CO Sensor Base with Sounder 4098-9772 and 4098-9773 with compatible sensors

Sensor model	Description	Point type	Panel I/O point usage		I/O point usage
			4007ES, 4010ES, 4100ES	4100U	
4098-9714, 4098-9774	Photoelectric Smoke Sensor	MCOPS	One	Two: one for photo, one for CO	Up to six: one for trouble reporting, one for sounder (MSOUND) one for photo (MPHOTO), one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off
4098-9754, 4098-9779	Multi-Sensor, Photoelectric and Heat Sensing	MCOPHS	One	Three: one for photo, one for heat, one for CO	(MAOFF)  Up to seven: one for trouble reporting, one for sounder (MSOUND), one for photo (MPHOTO), one for heat (MHEAT) one for CO gas (MCOGAS), one for CO fire (MACOFIRE), one to select multi-point correlation: false alarm reduction (MACOFALSE), or faster detection (MACOFAST), or correlation off (MAOFF)
4098-9733, 4098-9778	Heat Sensor	MCOHS	One	Two: one for heat, one for CO	Up to five: one for trouble reporting, one for sounder (MSOUND), one for heat (MHEAT), one for CO gas (MCOGAS), one for CO fire (MACOFIRE),
4098-9717	Ionization Smoke Sensor	MCOIS	One	Two: one for ion, one for CO	Up to five: one for trouble reporting, one for sounder (MSOUND), one for ion (MION), one for CO gas (MCOGAS), one for CO fire (MACOFIRE)

#### Note:

- 4100ES I/O point usage = 2500 max
   4100U I/O point usage = 2000 max.
   4010ES I/O point usage = 1000 max.
  - Note that I/O point and device capacity may be different. Consult your Simplex product supplier for application assistance. 4007ES Point Usage depends on options selected, 100, 175, or 250, refer to 4007ES documentation for details.
- 2. 4100ES/4100U public points usage = 2500 max per 4100ES/4100U to other nodes. 4007ES and 4010ES public points usage. You can make all 4007ES and 4010ES points public to other nodes.

Page 9 S4090-0011 Rev. 26 06/2023



# Table 16: MAPNET II Device Panel compatibility

1999-975   Addressable Station, double action push, no Simplex logo   1999-976   1999-	Model	Description	4100-3102 MAPNET II module	4100, 4100+, 4120	4020 UT*	2120 CDT**
2098-9795   Addressable Station, Globbe action push   2099-9796   Addressable Station, globe action   2099-9797   Addressable Station, globbe action breakglass   2099-9797   2009-9797	2099-9135	Addressable Station, double action push, no Simplex logo				Yes
2099-9795 Addressable Starton, single action 2099-9797 Addressable Starton, could a action breakglass 2099-9797 Addressable Starton, could a action breakglass 2190-9195 Monitor ZMA Class A, IDC, surface mount 2190-9195 Monitor ZMA Class B, IDC, surface mount 2190-9196 Monitor ZMA Class B, IDC, surface mount 2190-9197 Monitor ZMA Class B, IDC, surface Monitor 2190-9197 Monitor 2190-9197 Monitor 2190-9197 Monitor 2190-91						
2099-9797   Addressable Station, Gouble action brealglass   2099-9797   Addressable Station, single action, I DCAI   2099-9797   Addressable Station, single action, I DCAI   2099-9797   Addressable Station, single action, I DCAI   2099-9797   Addressable Station, I DC, Surface mount   2099-9797   Tomatics, Surface moun	2099-9795					
2099-9797	2099-9796					
2199-1913 Monitor ZAM, Class A, IDC, Surface mount 2199-1915 Monitor ZAM, Class B, IDC, Surface mount 2199-1915 Monitor ZAM, Class B, IDC, Surface mount 2199-1915 Monitor ZAM, Class B, IDC, Surface mount 2199-1915 Program Detector ZAM, Class B, IDC, Surface mount 2199-1915 Signal ZAM, Class A, IndC, Surface mount 2199-1915 Signal ZAM, Class A, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Class A, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1917 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1917 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Class B, IndC, Surface mount 2199-1917 Signal ZAM, Class B, IndC, Surface mount 2199-1916 Signal ZAM, Surface mount 2199-1916 Signal ZAM, Surface mount 2199-1917 Signal ZAM, Surface mount 2199-1917 Signal ZAM, Surface mount 2199-1917 Signal ZAM, Surface mount 2199-1918 Signal ZAM, Surface mou						
2198-9154 Monitor ZAM, Class B, IDC, starface mount 2198-9155 Monitor ZAM, Class B, IDC, starface mount 2198-9156 Monitor ZAM, Class B, IDC, starface mount 2198-9156 Monitor ZAM, Class B, IDC, starface mount 2198-9158 Four-wire Detector ZAM, Class B IDC, starface mount 2198-9158 Four-wire Detector ZAM, Class B IDC, starface mount 2198-9159 Signal ZAM, Class B, ALC, starface mount 2198-9150 Signal ZAM, Class B, ALC, starface mount 2198-9151 Signal ZAM, Class B, ALC, starface mount 2198-9151 Signal ZAM, Class B, ALC, starface mount 2198-9151 Control Relay ZAM, DPDT Cortacts, starface mount 2198-9152 Control Relay ZAM, DPDT Cortacts, starface mount 2198-9172 IAM, includes 2199-9172A 2198-9173 IAM, includes 2199-9172A 2198-9174 IAM, includes 2199-9172A 2198-9174 IAM, includes 2199-9172A 2198-9174 IAM, includes 2199-9172A 2198-9174 IAM, includes 2199-9172A 2198-9175 IAM, includes 2199-9175 IAM, includes 2199-9175 IAM, includes 2199-9175 IAM, includes 2						
2190-9155						
2199-9156						
2190-9157						
2199-9156	2190-9157					
2190-9165   Signal ZAM, Class A NAC, Surface mount						
239.916						
2190-9161   Signal ZAM, Class B NAC, curface mount   2190-9163   Control Relay ZAM, DPDT Contacts, surface mount   2190-9163   Control Relay ZAM, DPDT Contacts, slush mount   2190-9174   Control Relay ZAM, DPDT Contacts, flush mount   2190-9173   Two-point Vo Module   4090-9008   Dual Relay IAM   Includes 2190-9172   2190-9173   Two-point Vo Module   4090-9008   Dual Relay IAM   4090-9001   Supervised IAM with LED, without T-sense   Yes   Yes   Ves   4090-9005   Supervised IAM, encapsulated without LED, without T-sense   Yes   Yes   4090-9016   Class B IDC ZAM   Yes   4090-9016   Class B IDC ZAM   Yes   4090-9017   Class B IDC ZAM   Yes   4090-9018   Duct Sensor for 4098-9701   Sensor Head four-wire   4098-9703   Duct Sensor for 4098-9701   Sensor Head four-wire   4098-9703   Duct Sensor for 4098-9701   Sensor Head two-wire   4098-9705   In-Duct Sensor for 4098-9701   Feat two-wire   4098-9705   In-Duct Sensor for 4098-9701   Head two-wire   4098-9705   In-Duct Sensor for 4098-9701   Head two-wire   4098-9706   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9708   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9708   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor For 4098-9701   Head two-wire with 4 in. base   4098-9709   In-Duct Sensor Head four-wire with 4 in. base   4098-9709   In-Duct Sensor Head four-wire with 4 in. base   4098-9709						
2190-9162   Signal ZAM, Class B NAC, Rush mount						
2199-9163						
2190-9172						
2190-9172						
2190-9173   Iwo-point I/O Module						
A909-9008   Dual Relay IAM   A909-9001   Supervised IAM with LED, without T-sense   Yes   Yes, but   A909-9011   Supervised IAM, encapsulated without LED, without T-sense   Without Individual Indi						
Agognosis   Supervised IAM with LED, without T-sense   Yes   Yes   Yes   Without latch or track		· ·				
Without latch or track   A090-9051   Supervised IAMS, encapsulated without LED, without T-sense   Without latch or track   Selection   A090-9101   Class B IDC ZAM   Yes   Yes   A098-9701   A098-9701   Class B IDC ZAM   Yes   Yes   A098-9707   Duct Sensor for 4098-9701   Sensor Head four-wire   A098-9703   Duct Sensor for 4098-9701   Sensor Head four-wire   In-Duct Sensor for 4098-9701   In-Duct Sensor for 4098-9701   Head two-wire   A098-9705   In-Duct Sensor for 4098-9701   Head four-wire   A098-9706   Duct Sensor for 4098-9701   Head four-wire with 4 in. base   A098-9708   In-Duct Sensor for 4098-9701   Head four-wire with 4 in. base   A098-9708   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   A098-9750   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   A098-9750   In-Duct Sensor for 4098-9701   Head two-wire with 4 in. base   A098-9751   In-Duct Sensor Housing without relay   Yes   — A098-9751   A098-9751   A098-9750   Duct Sensor Housing without relay   Yes   — A098-9755   Duct Sensor Housing without relay   Yes   Yes   Yes   A098-9756   Duct Sensor Housing without relay   Yes   Yes   A098-9756   Duct Sensor Housing with relay   Yes   — A098-9781   Sensor Base 6 3/8 in. with sounder   Yes   A098-9783   Sensor Base 6 3/8 in. with sounder   Yes   A098-9783   Sensor Base 6 3/8 in. with sounder   A098-9784   Sensor Base 6 3/8 in. with sounder   A098-9785   Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay   A098-9786   Sensor Base 4 in. with supv. remote relay and remote ind. or relay   A098-9787   Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay   A098-9787   Sensor Base 6 in. with supv. remote relay and remote ind. or relay   A098-97975   Four-wire Sensor Base   A098-9795   A098-97975   Four-wire Sensor Base   A098-9795   A098-97975				Vρc		Vas hut
Class B IDC ZAM				103		
A098-9702   Duct Sensor for 4098-9701 Sensor Head four-wire	4030 3031	Supervised (Alvis), cheapsulated without EED, without 1 sense				or track
4098-9702         Duct Sensor for 4098-9701 Sensor Head four-wire           4098-9703         Duct Sensor for 4098-9701 Sensor Head two-wire           4098-9706         In-Duct Sensor for 4098-9701 Head two-wire           4098-9707         Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9750         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing without relay         Yes           4098-9754         In-Duct Sensor Housing without relay         Yes           4098-9755         Duct Sensor Housing without relay         Yes           4098-9756         Duct Sensor Housing without relay         Yes           4098-9780         Two-wire Sensor Base with supv. relay         Yes           4098-9781         Sensor Base 6 3/8 in. with remote relay driver           4098-9782         Sensor Base 6 3/8 in. with sounder           4098-9783         Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9785         Sensor Base 4 in. with supv. renduce relay and remote ind. or relay           4098-9789	4090-9101	Class B IDC ZAM		Yes		Yes
4098-9702         Duct Sensor for 4098-9701 Sensor Head four-wire           4098-9703         Duct Sensor for 4098-9701 Sensor Head two-wire           4098-9706         In-Duct Sensor for 4098-9701 Head two-wire           4098-9707         Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9750         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing without relay         Yes           4098-9754         In-Duct Sensor Housing without relay         Yes           4098-9755         Duct Sensor Housing without relay         Yes           4098-9756         Duct Sensor Housing without relay         Yes           4098-9780         Two-wire Sensor Base with supv. relay         Yes           4098-9781         Sensor Base 6 3/8 in. with remote relay driver           4098-9782         Sensor Base 6 3/8 in. with sounder           4098-9783         Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9785         Sensor Base 4 in. with supv. renduce relay and remote ind. or relay           4098-9789	4090-9106	Class A IDC ZAM				
4098-9704         In-Duct Sensor for 4098-9701 Sensor Head four-wire           4098-9705         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9707         Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9708         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9750         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing with relay         Yes           4098-9752         In-Duct Sensor Housing with ut all address bases         Yes           4098-9755         Duct Sensor Housing with relay         Yes         Yes           4098-9750         Duct Sensor Housing with ut relay         Yes         Yes           4098-9751         Duct Sensor Housing with ut relay         Yes         Yes           4098-9752         Duct Sensor Housing with relay         Yes         Yes           4098-9780         Two-wire Sensor Base 8ins and the sup. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with remote relay driver         4098-9785         Sensor Base 4 in. with son. For remote alarm ind. or relay <t< td=""><td></td><td>Duct Sensor for 4098-9701 Sensor Head four-wire</td><td></td><td></td><td></td><td></td></t<>		Duct Sensor for 4098-9701 Sensor Head four-wire				
4098-9704         In-Duct Sensor for 4098-9701 Sensor Head four-wire           4098-9705         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9707         Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9708         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9750         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing with relay         Yes           4098-9752         In-Duct Sensor Housing with ut all address bases         Yes           4098-9755         Duct Sensor Housing with relay         Yes         Yes           4098-9750         Duct Sensor Housing with ut relay         Yes         Yes           4098-9751         Duct Sensor Housing with ut relay         Yes         Yes           4098-9752         Duct Sensor Housing with relay         Yes         Yes           4098-9780         Two-wire Sensor Base 8ins and the sup. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with remote relay driver         4098-9785         Sensor Base 4 in. with son. For remote alarm ind. or relay <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td></t<>						
4098-9705   In-Duct Sensor for 4098-9701 Head two-wire   4098-9706   Duct Sensor for 4098-9701 Head four-wire with 4 in. base   4098-9707   Duct Sensor for 4098-9701 Head four-wire with 4 in. base   4098-9708   In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base   4098-9705   In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base   4098-9750   In-Duct Sensor Housing without relay   Yes   Yes   Yes   4098-9751   In-Duct Sensor Housing without relay   Yes   — 4098-9754   Photo/Heat Multi-Sensor used with dual address bases   Yes   Yes   Yes   Yes   Unct Sensor Housing without relay   Yes	4098-9704	In-Duct Sensor for 4098-9701 Sensor Head four-wire				
4098-9706         Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9708         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9709         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9750         In-Duct Sensor For 4098-9701 Head two-wire with 4 in. base           4098-9751         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing without relay         Yes           4098-9752         Photo/Heat Multi-Sensor used with dual address bases         Yes           4098-9753         Duct Sensor Housing without relay         Yes           4098-9754         Duct Sensor Housing with relay         Yes           4098-9780         Two-wire Sensor Base with supv. relay         Yes           4098-9781         Sensor Base 6 3/8 in. with supv. relay         Yes           4098-9782         Sensor Base 6 3/8 in. with remote relay driver           4098-9783         Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9797         Sensor Base, remote LED or unsupervised relay         Yes         Yes           4098-9797         Four-wire Sen						
4098-9707         Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9708         In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base           4098-9795         In-Duct Sensor Housing without relay         Yes           4098-9751         In-Duct Sensor Housing without relay         Yes           4098-9754         Photo/Heat Multi-Sensor used with dual address bases         Yes           4098-9755         Duct Sensor Housing without relay         Yes           4098-9756         Duct Sensor Housing with relay         Yes           4098-9757         Duct Sensor Housing with relay         Yes           4098-9780         Two-wire Sensor Base with supv. relay         Yes           4098-9781         Sensor Base 6 3/8 in.         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder           4098-9783         Sensor Base 6 3/8 in. with remote relay driver           4098-9784         Standard Sensor Base 4 in.           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 4 in. with supv. remote relay and remote ind. or relay           4098-9787         Sensor Base, remote LED or unsupervised relay         Yes           4098-9797         Yes         Yes           4098-9791         Four-wire Sensor Base						
4098-9708   In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base   4098-9750   In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base   4098-9750   In-Duct Sensor Housing without relay   Yes   Yes   4098-9751   In-Duct Sensor Housing with relay   Yes   — 4098-9754   Photo/Heat Multi-Sensor used with dual address bases   Yes   — 4098-9755   Duct Sensor Housing without relay   Yes   Yes   Yes   4098-9756   Duct Sensor Housing with relay   Yes   Yes   Yes   4098-9780   Two-wire Sensor Base with supv. relay   Yes   — 4098-9781   Sensor Base 6 3/8 in.   Yes   Yes   Yes   4098-9781   Sensor Base 6 3/8 in. with sounder   Yes   Yes   Yes   4098-9782   Sensor Base 6 3/8 in. with remote relay driver   Yes   Yes   Yes   4098-9785   Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay   4098-9785   Sensor Base 4 in. with conn. For remote alarm ind. or relay   4098-9785   Sensor Base 4 in. with sounder   4098-9786   Sounder Base 6 3/8 in, with conn. For remote alarm ind. or relay   4098-9786   Sounder Base 6 3/8 in. with sounder   4098-9786   Sounder Base 6 3/8 in. with sounder   4098-9786   Yes   Yes   Yes   4098-9795   Four-wire Sensor Base with supv. relay and remote ind. or relay   Yes   Yes   4098-9795   Yes   4098-9795   Yes   4098-9796   Yes   4098-9790   Address Standard Base for 4098-9754   Yes   — 4099-9001   Addressable Station, Standard   Yes   Yes   4099-9002   Addressable Station, Breakglass   Yes   Yes   4099-9002   Addressable Station, Breakglass   Yes   4099-9002   4098-9002   4098-9002   4098-9002   4098-9002   4098-9002   4098-9002   4098-9002   4098-9002   4098-9002						
4098-9709         In-Duct Sensor for 4098-9701 Head two-wire with 4 in. base           4098-9750         In-Duct Sensor Housing without relay         Yes           4098-9751         Photo/Heat Multi-Sensor used with dual address bases         Yes           4098-9755         Duct Sensor Housing without relay         Yes           4098-9755         Duct Sensor Housing without relay         Yes           4098-9756         Duct Sensor Housing with relay         Yes           4098-9780         Two-wire Sensor Base with supv. relay         Yes           4098-9781         Sensor Base 6 3/8 in. with supv. relay         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder           4098-9783         Sensor Base 6 3/8 in. with remote relay driver           4098-9784         Standard Sensor Base 4 in.           4098-9785         Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay           4098-9789         Sensor Base, remote LED or unsupervised relay         Yes           4098-9791         Four-wire Sensor Base with supv. relay         Yes           4098-9792         Standard Sensor Base         Yes           4098-9		In-Duct Sensor for 4098-9701 Head four-wire with 4 in. base				
4098-9750         In-Duct Sensor Housing without relay         Yes         Yes           4098-9751         In-Duct Sensor Housing with relay         Yes         —           4098-9754         Photo/Heat Multi-Sensor used with dual address bases         Yes         —           4098-9755         Duct Sensor Housing without relay         Yes         Yes           4098-9756         Duct Sensor Housing with relay         Yes         —           4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in.         Yes         —           4098-9782         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         Yes         Yes           4098-9784         Standard Sensor Base 4 in.         Yes         Yes           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9789         Sensor Base, remote LED or unsupervised relay         Yes         —           4098-97975         Four-wire Sensor Base with supv. relay         Yes         —						
4098-9751         In-Duct Sensor Housing with relay         Yes         —           4098-9754         Photo/Heat Multi-Sensor used with dual address bases         Yes         —           4098-9755         Duct Sensor Housing with out relay         Yes         Yes           4098-9756         Duct Sensor Housing with relay         Yes         —           4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in. with supv. relay         Yes         —           4098-9782         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         Standard Sensor Base 4 in.         Yes         Yes           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes         Yes           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Yes         Yes         Yes           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes         Yes           4098-9789, Sensor Base, remote LED or unsupervised relay         Yes         Yes         —           4098-9791         Four-wire Sensor Base with supv. relay         Yes         —				Yes		Yes
4098-9754         Photo/Heat Multi-Sensor used with dual address bases         Yes         —           4098-9755         Duct Sensor Housing without relay         Yes         Yes           4098-9756         Duct Sensor Housing with relay         Yes         —           4098-9756         Two-wire Sensor Base with supv. relay         Yes         —           4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with remote relay driver         Yes         Yes           4098-9783         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9785         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes         Yes           4098-9789, sensor Base, remote LED or unsupervised relay         Yes         Yes         Yes         Yes           4098-9791         Four-wire Sensor Base with supv. relay         Yes         Yes         Yes           4098-9792, down-wire Sensor Base         Yes         Yes         Yes           4098-9794         Sounder Base         Yes         —				Yes		_
4098-9755         Duct Sensor Housing without relay         Yes         Yes           4098-9756         Duct Sensor Housing with relay         Yes         —           4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in.         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         Yes         Yes           4098-9784         Standard Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes           4098-9785         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9789         Sensor Base, remote LED or unsupervised relay         Yes         Yes           4098-9791         Four-wire Sensor Base with supv. relay         Yes         —           4098-9792         Standard Sensor Base         Yes         —           4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001 <td< td=""><td></td><td></td><td></td><td></td><td></td><td>_</td></td<>						_
4098-9756         Duct Sensor Housing with relay         Yes         —           4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in.         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         Sensor Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9786         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9787         Sensor Base with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9795         Four-wire Sensor Base with supv. relay         Yes         —           4098-9791         Four-wire Sensor Base with supv. relay         Yes         —           4098-9792, Standard Sensor Base         Yes         Yes           4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes						Yes
4098-9780         Two-wire Sensor Base with supv. relay         Yes         —           4098-9781         Sensor Base 6 3/8 in.         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder         Yes         Yes           4098-9783         Sensor Base 6 3/8 in. with remote relay driver         Standard Sensor Base 4 in.         Standard Sensor Base 4 in.         Yes           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay         Yes         Yes           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Yes         Yes           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay         Yes         Yes           4098-9789, Sensor Base, remote LED or unsupervised relay         Yes         Yes           4098-9791         Four-wire Sensor Base with supv. relay         Yes         —           4098-9792, Standard Sensor Base         Yes         Yes           4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001         Addressable Station, Standard         Yes         Yes <td></td> <td></td> <td></td> <td></td> <td></td> <td>_</td>						_
4098-9781         Sensor Base 6 3/8 in.         Yes         Yes           4098-9782         Sensor Base 6 3/8 in. with sounder         4098-9783         Sensor Base 6 3/8 in. with remote relay driver           4098-9784         Standard Sensor Base 4 in.         4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         Sensor Base 4 in. with supv. remote relay and remote ind. or relay           4098-9787         Sensor Base, remote LED or unsupervised relay         Yes         Yes           4098-9799, 4098-9791         Four-wire Sensor Base with supv. relay         Yes         —           4098-9792, 4098-9794         Standard Sensor Base         Yes         Yes           4098-9795         Two Address Sounder Base         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001         Addressable Station, Standard         Yes         Yes           4099-9002         Addressable Station, Breakglass         Yes         Yes						_
4098-9782       Sensor Base 6 3/8 in. with sounder         4098-9783       Sensor Base 6 3/8 in. with remote relay driver         4098-9784       Standard Sensor Base 4 in.         4098-9785       Sensor Base 4 in. with conn. For remote alarm ind. or relay         4098-9786       Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         4098-9787       Sensor Base 4 in. with supv. remote relay and remote ind. or relay         4098-9789,       Sensor Base, remote LED or unsupervised relay         4098-9791       Four-wire Sensor Base with supv. relay       Yes         4098-9792,       Standard Sensor Base       Yes         4098-9794       Sounder Base       Yes         4098-9795       Two Address Sounder Base for 4098-9754       Yes         4098-9796       Two Address Standard Base for 4098-9754       Yes         4099-9001       Addressable Station, Standard       Yes         4099-9002       Addressable Station, Breakglass		· -				Yes
4098-9783       Sensor Base 6 3/8 in. with remote relay driver         4098-9784       Standard Sensor Base 4 in.         4098-9785       Sensor Base 4 in. with conn. For remote alarm ind. or relay         4098-9786       Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         4098-9787       Sensor Base 4 in. with supv. remote relay and remote ind. or relay         4098-9789,       Sensor Base, remote LED or unsupervised relay         4098-9775       Yes         4098-9791       Four-wire Sensor Base with supv. relay       Yes         4098-9792,       Standard Sensor Base       Yes         4098-9776       Yes       Yes         4098-9794       Sounder Base       Yes       —         4098-9795       Two Address Sounder Base for 4098-9754       Yes       —         4098-9796       Two Address Standard Base for 4098-9754       Yes       —         4099-9001       Addressable Station, Standard       Yes       Yes         4099-9002       Addressable Station, Breakglass						
4098-9784         Standard Sensor Base 4 in.           4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay           4098-9789,         Sensor Base, remote LED or unsupervised relay         Yes           4098-9775         Yes         —           4098-9791         Four-wire Sensor Base with supv. relay         Yes         —           4098-9792,         Standard Sensor Base         Yes         Yes           4098-9776         Yes         Yes         —           4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001         Addressable Station, Standard         Yes         Yes           4099-9002         Addressable Station, Breakglass         Yes         Yes						
4098-9785         Sensor Base 4 in. with conn. For remote alarm ind. or relay           4098-9786         Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay           4098-9787         Sensor Base 4 in. with supv. remote relay and remote ind. or relay           4098-9789,         Sensor Base, remote LED or unsupervised relay         Yes           4098-9775         Four-wire Sensor Base with supv. relay         Yes           4098-9791         Four-wire Sensor Base with supv. relay         Yes           4098-9792,         Standard Sensor Base         Yes           4098-9776         Yes         Yes           4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001         Addressable Station, Standard         Yes         Yes           4099-9002         Addressable Station, Breakglass         Yes         Yes						
4098-9786       Sounder Base 6 3/8 in. with conn. For remote alarm ind. or relay         4098-9787       Sensor Base 4 in. with supv. remote relay and remote ind. or relay         4098-9789,       Sensor Base, remote LED or unsupervised relay         4098-9775       Yes         4098-9791       Four-wire Sensor Base with supv. relay         4098-9792,       Standard Sensor Base         4098-9776       Yes         4098-9794       Sounder Base         4098-9795       Two Address Sounder Base for 4098-9754         4098-9796       Two Address Standard Base for 4098-9754         4099-9001       Addressable Station, Standard         4099-9002       Addressable Station, Breakglass						
4098-9787       Sensor Base 4 in. with supv. remote relay and remote ind. or relay         4098-9789,       Sensor Base, remote LED or unsupervised relay         4098-9775       Yes         4098-9791       Four-wire Sensor Base with supv. relay         4098-9792,       Standard Sensor Base         4098-9776       Yes         4098-9794       Sounder Base         4098-9795       Two Address Sounder Base for 4098-9754         4098-9796       Two Address Standard Base for 4098-9754         4099-9001       Addressable Station, Standard         4099-9002       Addressable Station, Breakglass						
4098-9789, 4098-9775       Sensor Base, remote LED or unsupervised relay       Yes       Yes         4098-9791       Four-wire Sensor Base with supv. relay       Yes       —         4098-9792, 4098-9776       Standard Sensor Base       Yes       Yes         4098-9794       Sounder Base       Yes       —         4098-9795       Two Address Sounder Base for 4098-9754       Yes       —         4098-9796       Two Address Standard Base for 4098-9754       Yes       —         4099-9001       Addressable Station, Standard       Yes       Yes         4099-9002       Addressable Station, Breakglass						
4098-9775       4098-9791       Four-wire Sensor Base with supv. relay       Yes       —         4098-9792, 4098-9776       Standard Sensor Base       Yes       Yes         4098-9794       Sounder Base       Yes       —         4098-9795       Two Address Sounder Base for 4098-9754       Yes       —         4098-9796       Two Address Standard Base for 4098-9754       Yes       —         4099-9001       Addressable Station, Standard       Yes       Yes         4099-9002       Addressable Station, Breakglass       Yes       Yes				Vρc		Vac
4098-9792,       Standard Sensor Base       Yes       Yes         4098-9776       Yes       —         4098-9794       Sounder Base       Yes       —         4098-9795       Two Address Sounder Base for 4098-9754       Yes       —         4098-9796       Two Address Standard Base for 4098-9754       Yes       —         4099-9001       Addressable Station, Standard       Yes       Yes         4099-9002       Addressable Station, Breakglass       Yes       Yes	4098-9775					163
4098-9776       Yes       —         4098-9794       Sounder Base       Yes       —         4098-9795       Two Address Sounder Base for 4098-9754       Yes       —         4098-9796       Two Address Standard Base for 4098-9754       Yes       —         4099-9001       Addressable Station, Standard       Yes       Yes         4099-9002       Addressable Station, Breakglass       Yes       Yes						_
4098-9794         Sounder Base         Yes         —           4098-9795         Two Address Sounder Base for 4098-9754         Yes         —           4098-9796         Two Address Standard Base for 4098-9754         Yes         —           4099-9001         Addressable Station, Standard         Yes         Yes           4099-9002         Addressable Station, Breakglass         Yes         Yes		Standard Sensor Base		Yes		Yes
4098-9795Two Address Sounder Base for 4098-9754Yes—4098-9796Two Address Standard Base for 4098-9754Yes—4099-9001Addressable Station, StandardYesYes4099-9002Addressable Station, Breakglass						<u>                                     </u>
4098-9796Two Address Standard Base for 4098-9754Yes—4099-9001Addressable Station, StandardYesYes4099-9002Addressable Station, Breakglass				Yes		_
4099-9001Addressable Station, StandardYesYes4099-9002Addressable Station, Breakglass	4098-9795	Two Address Sounder Base for 4098-9754		Yes		_
4099-9002 Addressable Station, Breakglass		Two Address Standard Base for 4098-9754		Yes		_
	4099-9001	Addressable Station, Standard		Yes		Yes
	4099-9002					

Page 10 S4090-0011 Rev. 26 06/2023





# Table 16: MAPNET II Device Panel compatibility

Model	Description	4100-3102 MAPNET II module	4100, 4100+, 4120	4020	UT*	2120 CDT**
4190-9050	4-20 mA AMZ, revision 2.01 firmware, surface mount, one unit load	Yes	Yes with	-	-	-
4190-9051	4-20 mA AMZ, revision 2.01 firmware, flush mount, one unit load	Yes	revision 8 or higher	-	-	-
VLC-600	TrueAlarm LaserCOMPACT, emulates 4-20 mA AMZ	Yes	Yes with revision 8.01 or higher	-	-	-

<sup>\*</sup> UT = Universal Transponder, see data sheet S4100-0007.

Page 11 S4090-0011 Rev. 26 06/2023

<sup>\*\* 2120</sup> CDT = Communicating Device Transponder with MAPNET II and TrueAlarm software.



#### **IDNet communications**

#### What does it mean?

IDNet is an acronym for Individual Device Network. The IDNet design is the latest generation of addressable device communications, improving upon the basic MAPNET II communications protocol.

#### Where is it used?

IDNet communications are provided by Simplex 4010, 4007ES, 4008, 4010ES, 4100ES, and 4100U Fire Alarm Control Units (FACU). In addition to IDNet/MAPNET II addressable devices, IDNet communications adds new devices such as the IDNet Isolator base, the 4009 IDNet NAC Extender, and the Security IAM. 4007ES, 4010ES, 4100ES, and later versions of 4100U software (revision 11 and higher) also communicate with multi-point relays and the multi-sensor. Different FACUs may provide different device compatibility.

#### What does it do?

The operation is similar to MAPNET II but there are significant differences. The IDNet protocol and hardware enhancements support up to 250 addressable devices on a single wire pair and can support additional device types and different operations. The 4008 Fire Alarm Control FACU provides up to 200 addressable device support. The 4007ES is standard with 100 devices and optionally up to 250.

#### How does it work?

Basic operation is similar to that of MAPNET II but with an expanded capability that requires a different control FACU to decode the additional device types and operations available with IDNet communications.

## What is the difference between 4010 IDNet and 4007ES, 4010ES, 4100ES, and 4100U IDNet operation?

The basic communications protocol of IDNet operation is similar, just as RS-232 or RS-485 is similar. However, even though the IDNet communications protocol is similar, not all control FACUs can recognize all addressable devices. For compatibility reasons, there is a distinction between 4008 and 4010, and 4007ES, 4010ES, 4100ES, and 4100U IDNet operation.

#### What is the difference between 4010 IDNet and 4008 IDNet operation?

The 4008 Addressable FACU provides a unique set of features. It is for smaller applications and only supports two photoelectric sensitivity levels. However, it is capable of controlling the 4090-9116 IDNet Communications Isolator, and it is compatible with the 4090-9007 IDNet Signal IAM.

## What is IDNet 2 and IDNet 2+2 operation?

**IDNet 2** describes 4100ES and 4010ES FACUs that provide a 250 point electrically isolated IDNet channel with a two short circuit isolating output loop module. This module provides improved noise immunity and allows IDNet circuits to use existing unshielded and untwisted wiring in conduit with other fire alarm circuits. The communications scheme is standard IDNet format. IDNet 2 output is compatible with QuickConnect and QuickConnect2 sensors, Isolator bases, and IDNet Isolators.

**IDNet 2+2** describes 4100ES and 4010ES FACUs that provide a 250 point isolated IDNet channel with a four short circuit isolating output loop module. The communications scheme is standard IDNet format. IDNet 2+2 output is compatible with QuickConnect and QuickConnect2 sensors, Isolator bases, and IDNet Isolators.

### What is IDNet+ operation?

IDNet+ describes an electrically isolated IDNet SLC with a single output loop and with improved noise immunity as provided by the 4007ES, and by 4010ES FACUs without an IDNet 2 SLC.

IDNet+ was originally used to describe the isolated IDNet SLC provided by the 4100-3107 module for 4100ES and 4100U FACUs. 4100-3107 provided four isolated output loops with 246 addressable point capacity. This module is not needed for 4100ES FACUs with IDNet 2 or IDNet 2+2 SLC modules.

# What is IDNet 1+ operation?

**IDNet 1+** describes the original electrically isolated IDNet SLC single loop output of the 4100ES with EPS. IDNet 1+ has been replaced by the IDNet 2 and IDNet 2+2 modules.

Refer to specific FACU data sheets for additional information.

Page 12 S4090-0011 Rev. 26 06/2023



### MAPNET II communications

#### What does it mean?

MAPNET is an acronym for Multi-Application Peripheral NETwork. MAPNET II was introduced as an improved version of MAPNET (I) in 1991. The improvements included electrical design changes that impacted both the transmit and receive circuits and provided better electrical transient immunity and overall improved performance.

# Where is it used?

Availability includes system models 4020, 4100, 4120, and 4100U or 4100ES, and with 2120 Systems using the CDT (Communicating Device Transponder). All MAPNET II transceiver control modules only communicate with MAPNET II compatible addressable devices. However, some addressable devices can automatically adapt to communicate with either MAPNET II or IDNet communication protocols.

#### What does it do?

MAPNET II is an addressable communications protocol that provides power and half-duplex communications over a single pair of wires for up to 127 addressable devices. Half-duplex communications are bi-directional, but occur in one direction at a time. Information can include status, for example: normal, trouble, alarm, abnormal, and commands such as turn on or off a relay, reset a ZAM, or activate a sounder base. Additionally, TrueAlarm analog sensor information is communicated through MAPNET II communications, or IDNet communications.

#### How does it work?

The control FACU sends out polling commands for status monitoring or individual device commands. This occurs by imposing voltage variations on a steady DC level. When the polling stops, the DC level is held high and each responding device answers for each unique address by switching a resistor onto the DC circuit. This causes data to be readable at the FACU. The steady DC level provides power for the MAPNET II communications receiver circuit. For some low power devices, such as basic smoke/heat sensors and IAMs, the steady DC level can power the entire device meaning only a single wire pair is required.

Page 13 S4090-0011 Rev. 26 06/2023



# Software compatibility reference

## Table 17: Software compatibility reference

4009-9301	4009 IDNet NAC Extender (4009A)	Use with 4100U requires software revision 11 or higher.
1090-9005		
	uses 2975-9227	Requires 4007ES Revision 3.04 software or higher, or 4010 Revision 3.01 software or higher, or 4100U Revision 11.05 software or higher, or
4090-9006	SRP with Enclosure	4010ES/4100ES.
4090-9007	IDNet Signal IAM	Use with 4100U requires software revision 11.11.01 or higher.
4090-9008	Dual Contact Relay IAM	Use requires IDNet firmware revision 3.12.01 or higher.
	Relay IAM with T-Sense Input	
	Relay IAM with unsupervised input	
4090-9120	Six-point Module, four T-Sense inputs, two relays	Lieuwith 4100Lieuwitee veriein 110 ooftware er higher
4098-9754,	Photo/Heat Multi-Sensor	Use with 4100U requires revision 11.0 software or higher.
4098-9764,		
4098-9779		
4098-9019,	Addressable Beam Detector	Please refer to data sheet S4098-0049 for detailed compatibility
4098-9020		information.
4098-9797	CO Sensor Standard Base, 5 Year CO sensor life	Use with 4100ES and 4100U at software revision 12.05 or higher,
4098-9798	CO Sensor Sounder Base, 5 Year CO sensor life	models now superseded by 10 year life CO sensors.
4098-9780	Two-wire Sensor Base with Supervised Relay	Use requires IDNet firmware revision 3.12.04 or higher.
4098-9770	CO Sensor Standard Base, 10 Year CO sensor life	Use with 4007ES, and 4100ES or 4010ES at software revision 2.01.02 or
4098-9771	CO Sensor Sounder Base, 10 Year CO sensor life	higher.
4098-9772	CO Sensor Base with 520 Hz Sounder, 10 Year CO sensor life	<b>Note:</b> Use with 4100U only provides 5 year CO sensor life, and
4098-9773	CO Sensor Base with 520 Hz Sounder, 10 Year CO sensor life	requires 4100U software at revision 12.05 or higher.
4100-1274	Microphone Multiplex Module, with internal IAM	Use with 4100ES.
4907-9007	LED Message Board	Use with 4100U at software revision 12.05.04 or higher and IDNet/SPS at revision 3.11.03 or higher.
4098-9734	High Temperature Heat Sensor	Use with 4007ES, 4010ES or 4100ES software revision 3.03.05 or higher and IDNet2 or IDNet2+2 at software revision 1.02 or higher. Use with the following IDNet modules revision 3.12.12 or higher: 250-point IDNet, SPS, IDNet+, IDNet1+, 4010ES MSS2. Not compatible with 4100U.
4090-9122,		Use with 4007ES, 4010ES or 4100ES software revision 6.01 or higher
4098-9766,		and IDNet2 or IDNet2+2 at software revision 3.01 or higher.
4098-9767		