One FireLite Place Northford, CT 06472

Phone: 203.484.7161

# **MMF-302 Interface Module**

#### SPECIFICATIONS

	JF EGIFICATIONS	
	Normal Operating Voltage:	15 to 32 VDC
	Maximum Current Draw:	5.1 mA (LED on)
	Average Operating Current:	270 μA (LED flashing)
	EOL Resistance:	3.9K ohms
	Maximum IDC Resistance:	25 Ohms
IDC Supply Voltage (between Terminals T10 and T11)		T10 and T11)
	Regulated DC Voltage:	24 VDC power limited
	Ripple Voltage:	0.1 Volts RMS maximum
	Alarm Current:	90 mA per module
	Standby Current:	13 mA Maximum @24 VDC
	Temperature Range:	32°F to 120°F (0°C to 49°C)
	Humidity:	10% to 93% Non-condensing
	Dimensions:	4.5" H × 4" W × 1.25" D (Mounts to a 4" square by 2.125" deep box.)
	Accessories:	SMB500 Electrical Box

#### **BEFORE INSTALLING**

This information is included as a quick reference installation guide. Refer to the control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.


#### **GENERAL DESCRIPTION**

The MMF-302 Interface Module is intended for use in addressable two-wire systems, where the individual address of each module is selected using the built-in rotary switches. This module allows addressable panels to interface and monitor two-wire conventional smoke detectors. It transmits the status (normal, open, or alarm) of one full zone of conventional detectors back to the control panel. All two-wire detectors being monitored must be UL compatible with this module. The MMF-302 has a panel controlled LED indicator and can be used to replace an M302 module in existing systems.

#### **COMPATIBILITY REQUIREMENTS**

To ensure proper operation, these modules shall be connected to listed compatible system control panels only. In addition, please refer to Fire•Lite Device Compatibility document number 15384 for the list of compatible detectors.

#### **FIGURE 1. CONTROLS AND INDGICATORS**

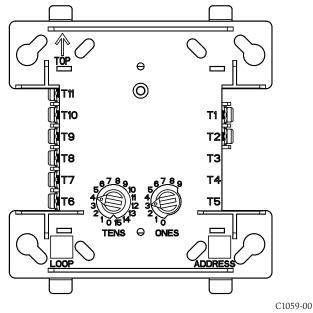

#### MOUNTING


The MMF-302 mounts directly to 4-inch square electrical boxes. (See Figure 2.) The box must have a minimum depth of 2.125 inches. Surface mounted electrical boxes (SMB500) are available.

## WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations. This module is intended for power-limited wiring only.


- 1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
- 2. Set the address on the module per job drawings.
- 3. Secure module to electrical box supplied by installer. (See Figure 2.)

### FIGURE 2. MODULE MOUNTING

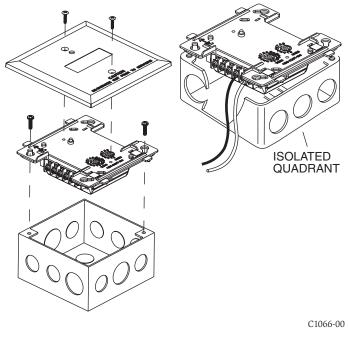

I56-3652-004 7/1/2022


#### FIGURE 3. INTERFACE TWO-WIRE CONVENTIONAL DETECTORS, NFPA CLASS B

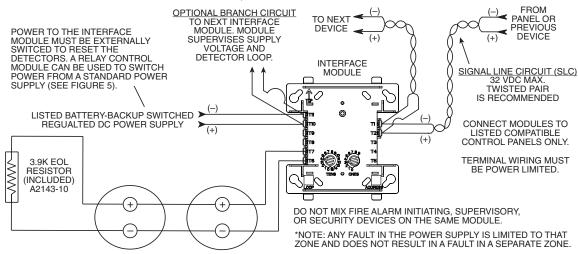

DO NOT LOOP WIRE UNDER TERMINALS. BREAK ALL WIRE RUN TO PROVIDE SUPERVISION OF CONNECTIONS. DETECTORS MUST BE UL LISTED COMPATIBLE WITH MODULE. INSTALL DETECTORS PER MANUFACTURER'S INSTALLATION INSTRUCTIONS

C1061-00

#### FIGURE 4. INTERFACE TWO-WIRE CONVENTIONAL DETECTORS, NFPA CLASS A

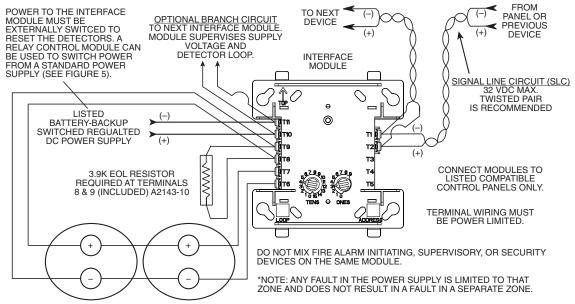

DO NOT LOOP WIRE UNDER TERMINALS. BREAK ALL WIRE RUN TO PROVIDE SUPERVISION OF CONNECTIONS. DETECTORS MUST BE UL LISTED COMPATIBLE WITH MODULE. INSTALL DETECTORS PER MANUFACTURER'S INSTALLATION INSTRUCTIONS

C1062-00

(-)



FIGURE 5. RELAY CONTROL MODULE USED TO DISCONNECT A POWER SUPPLY

